
## Roll & Hill

CONTENTS

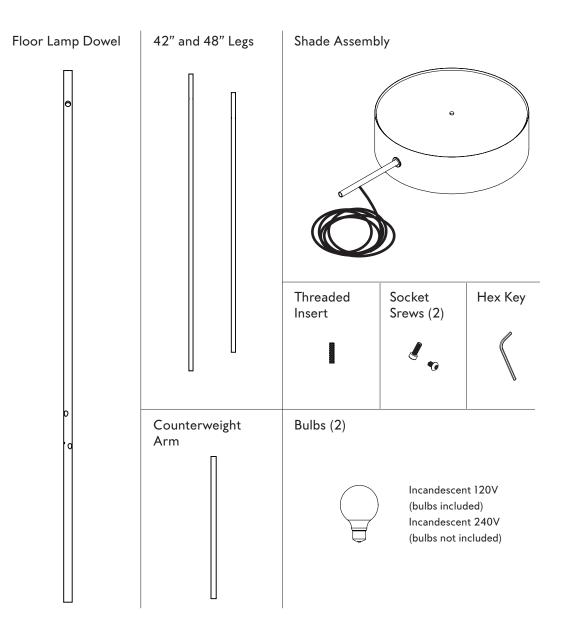

## SAFETY INFORMATION

Only one light bulb per socket.

Only suitable for direct mounting on non-combustible surfaces.

Under no circumstances can Excel Fixtures be mounted on normally flammable surfaces. Suitable for dry, indoor use only.

Maximum ambient temperatures: 25° C

## Roll & Hill

## EXCEL FLOOR LAMP ASSEMBLY

1. Slide the longer leg (A) through higher leg hole on wooden dowel (B) until a threaded hole lines up with the opening.

2. Using the provided hex key, tighten the socket screw in dowel, fixing the leg in place. Note that when tightening set screws, gentle pressure is sufficient. Over-tightening may cause damage.

- 3. Repeat for the shorter leg (C) through the lower leg hole (D).
- 3. When both legs are fixed in place, stand lamp upright and place in intended spot.
- 4. Unscrew nut (E) from top of diffuser (F). Remove nut and diffuser.
- 5. Install two light bulbs and replace diffuser and nut. Do not use bulbs that exceed 60 watts.
- 6. Slide rear shade arm through the hole in the top of the wooden dowel (G) closed end first.
- 8. Support the shade while screwing the adjoining threaded shade arm into open ended shade arm (H).
- 9. Reposition the connected shade arm so that the seam is concealed by wooden dowel.

10. Uncoil the cord set and plug into the wall.

11. Coil the extra cord and hang over the leg extrusions at back of lamp. Allow desired amount of slack between the shade and the coil.

12. The shade is adjustable about its axis. Consider tilting it to best distribute light.

