
CONTENTS

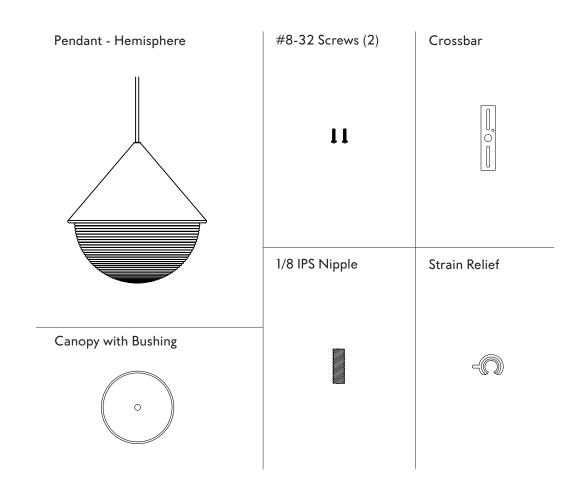

SAFETY INFORMATION

Only one light bulb per socket.

Only suitable for direct mounting on non-combustible surfaces.

Under no circumstances can Half and Half Pendants be mounted on normally flammable surfaces. Suitable for dry, indoor use only.

Maximum ambient temperature: 25° C


If the external flexible cable or cord of this luminare is damaged, it shall be exclusively replaced by Roll & Hill or Roll & Hill's service agent or a similarly qualified person in order to avoid hazard.

Roll & Hill


CEILING INSTALLATION

Note: Please contact a licensed electrician. Note: Do not use bulbs that exceed 60 watts.

1. Install crossbar (A) to junction box (B) using #8-32 screws (C). It is recommended to pull the main wires out so they are accessible while making the main connection later. Once secure, screw the nipple (D) into crossbar.

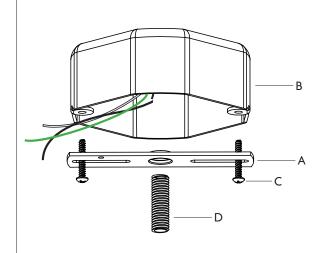

- 2. Cut the electrical cable to desired length and feed through the bushing in the ceiling canopy (E) and the nipple.
- 3. Tie a knot in the electrical cable above the crossbar and crimp the C shaped strain relief (F) just below the knot.
- 4. Strip wires and make connections to the leads in the ceiling using provided wire nuts (G). Attach the green ground wire to the crossbar with ground screw.
- 5. Tuck the connected wires into the junction box. Raise the canopy with attached knurled nut and thread onto nipple, tightening flush to the ceiling.
- 6. Make sure fixture is powered off before screwing the bulb into the socket.

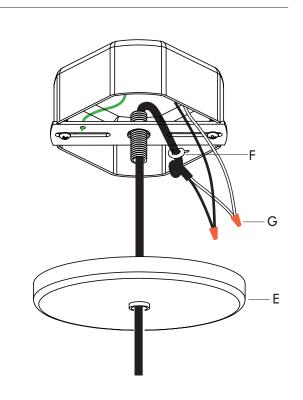

CEILING INSTALLATION continued

To change lamp:

- 1. While fixture is hanging from ceiling, slowly slide the metal cone (B) up the power cord (A).
- 2. Once light bulb (C) is accessible, carefully unscrew out of socket and replace with the recommended light bulb replacement.
- 3. Replace metal cone (B) to its original position.

