

- PENDANTS: one
- MOUNTING: shallow brushed nickel canopy 116mm (4.5") in diameter x 7mm (0.3") deep
- LAMPING: 1.5w LED or 10w xenon
- COAX: adjustable. 3000mm (10') standard / up to 30500mm (100') maximum
- MATERIALS: cast glass, blown borosilicate glass, braided metal coaxial cable, electrical components, brushed nickel canopy
- WEIGHT: approximately 2kg (4lb)
- TRANSFORMERS: integral (transformer housed within junction box)

DESCRIPTION

The 14.1 shallow canopy is a single 14 pendant fixture with a shallow brushed nickel canopy designed to fit over an existing junction box in which the transformer is installed. The canopy is 116mm (4.5") in diameter and 7mm (0.3") deep, which creates a subtle profile that minimizes the impact in the application surface. The pendant drop lengths on this light fixture are adjustable up to the specified maximum.

The 14 is an articulated, seamed cast glass sphere with a frosted cylindrical void that houses a low voltage lamp. Individual pendants are visually quite subtle, but gain tremendous strength when multiplied and clustered in large groups.


BOCCI

SHALLOW CANOPY

14.1

Design by Omer Arbel
 PRODUCT SPECIFICATION



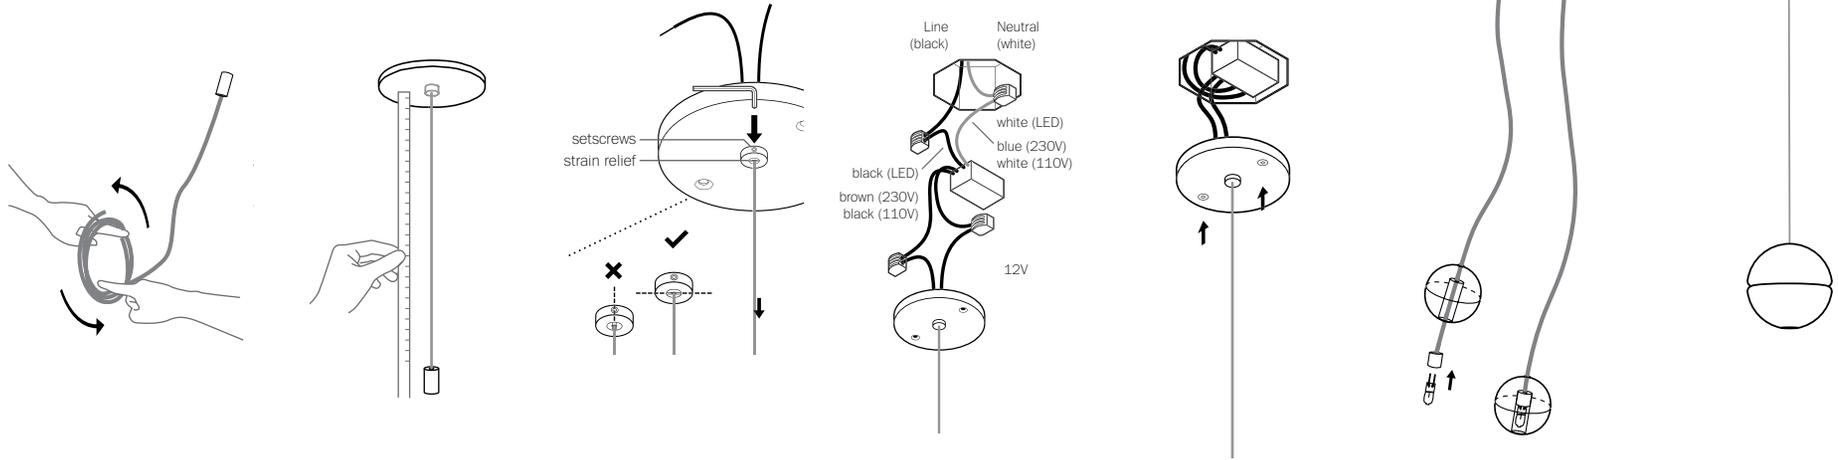

1

Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

2

Determine the overall drop for the pendant fixture.

3

Thread the coaxial cable through the canopy, use a 2mm Allen key to loosen the setscrew in the canopy and gently feed the cable through until you have reached your desired drop length.

Use Allen key to tighten the setscrew to hold the strain relief and secure the coaxial cable at its new length. Perform a gentle tug test to ensure it is secure.

DO NOT OVERTIGHTEN.

Note: The strain relief is a black plastic collar around the coaxial cable. There is a single slot opening on the side of the strain relief component. It is essential that this opening is oriented at 90 degrees to set screw chamber. There can be no contact between the set screw and the cable.

RISK OF ELECTRIC SHORT!

4

Xenon (110V) or LED: connect the black wire to black and white wire to white wire.

Xenon (230V): connect black wire to brown wire and white wire to blue wire.

Connect the coaxial cable to the open slots in the terminal block on the 12V side of the transformers.

For multiple pendant installations, ensure that the braided outer wires are all connected to one 12V output wire and all inner insulated wires are connected to the other or a short will occur.

Once all coaxial connections are made, lift the fixture into position and connect the line voltage to the open slot in the appropriate terminal block.

5

The client is responsible to ensure fasteners are attached to a robust structural substrate.

Tuck the transformer and wiring into the octagonal box, if available, and place canopy over top, lining up the fastener holes or connecting directly to structural ceiling surface. Affix canopy with fasteners provided.

6

Bocci 10w xenon or 1.5w LED lamps included. Lamping is transformer specific.

Plug the lamp into the socket. Do not touch the lamp with your bare hands.

Note: when using a dimmer use only low voltage electronic dimmer

7

Clean fingerprints from glass surfaces.

Turn fixture on.

BOCCI

SHALLOW CANOPY

14.1

Design by Omer Arbel
 PRODUCT INSTALLATION INSTRUCTIONS