

PENDANTS: twenty-six

MOUNTING: white powder coated rectangular canopy 1000mm (39.4') x 335mm (13.2') x 53mm (2') deep

LAMPING: 1.5w LED or 10w xenon

COAX: fixed lengths. 3000mm (10') standard / up to 30500mm (100') maximum

MATERIALS: cast glass, blown borosilicate glass, braided metal coaxial cable, electrical components, white powder coated canopy

WEIGHT: approximately 74kg (163.1lb)

TRANSFORMERS: integral

DESCRIPTION

14.26 is a random configuration of twenty-six 14 pendants hung from a rectangular canopy. The drop lengths of the pendants are randomized between a client specified range of heights to variously cluster and scatter. The result is an ambient installation or field of light.

The 14 is an articulated, seamed cast glass sphere with a frosted cylindrical void that houses a low voltage lamp. Individual pendants are visually quite subtle, but gain tremendous strength when multiplied and clustered in large groups.


BOCCI

RECTANGLE

14.26

Design by Omer Arbel
 PRODUCT SPECIFICATION



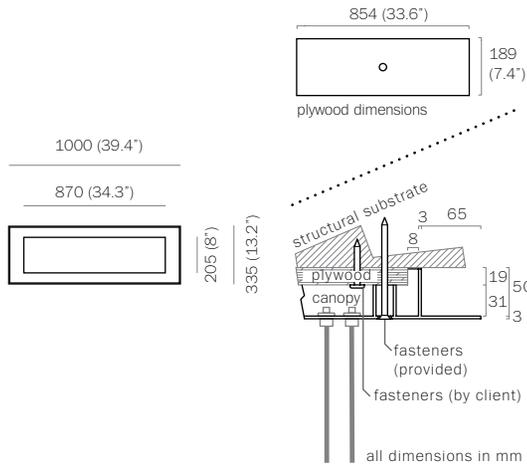

1

Measure and mark the light fixture canopy position on the ceiling


2

Note: The client is responsible for providing a robust 19mm (3/4") plywood backing or wood blocking to securely anchor to the structural substrate.

Connections from the plywood to the structural substrate are the client's responsibility.

Measure the plywood so that it fits within the canopy side walls (refer to detail above).

Anchor the plywood backing to the structural ceiling substrate.

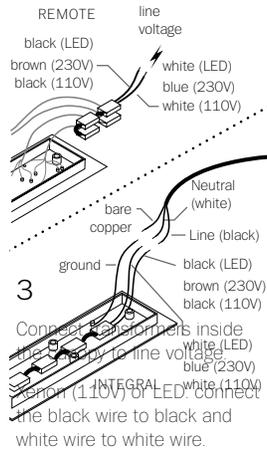


Xenon (230V): connect black wire to brown wire and white wire to blue wire.

For the ground connection, connect the green wire with yellow stripe to the bare copper wire or green wire in the junction box.

Note: As an option, Bocci recommends mounting transformers remotely in a close, accessible and hidden location for ease of long term maintenance. Installation to be done by certified personnel to ensure compliance with the code.

4

Anchor canopy into the plywood backing using the fasteners provided.

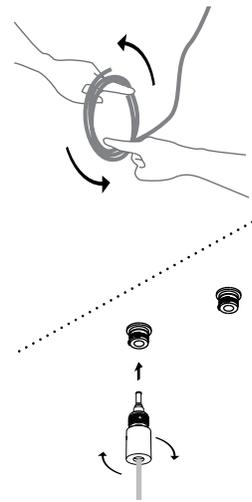

5

Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.


Each pendant terminates in a "headphone jack" type connector, which plugs into a receiving receptacle in the canopy. Clients are encouraged to compose their own pendant configuration on site, thus creating a truly unique fixture. After plugging in each pendant, turn the threaded sheath into place by hand ensuring that it is adequately tightened. Tools are not required.

6

Bocci 10w xenon or 1.5w LED lamps included. Lamping is transformer specific.

Plug the lamp into the socket. Do not touch the lamp with your bare hands.

Note: when using a dimmer use only low voltage electronic dimmer

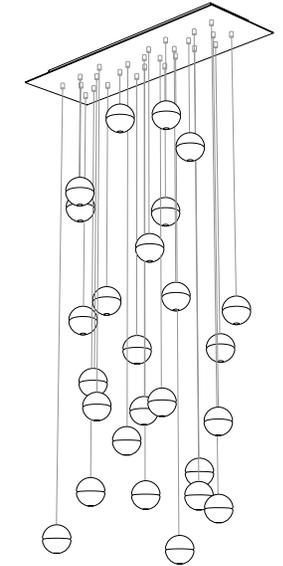

7

Clean fingerprints from glass surfaces.

Turn fixture on.



BOCCI

RECTANGLE


14.26

Design by Omer Arbel
 PRODUCT INSTALLATION INSTRUCTIONS



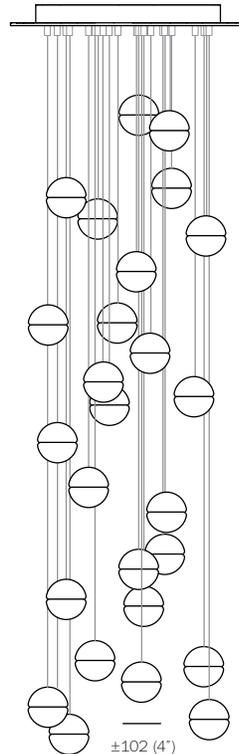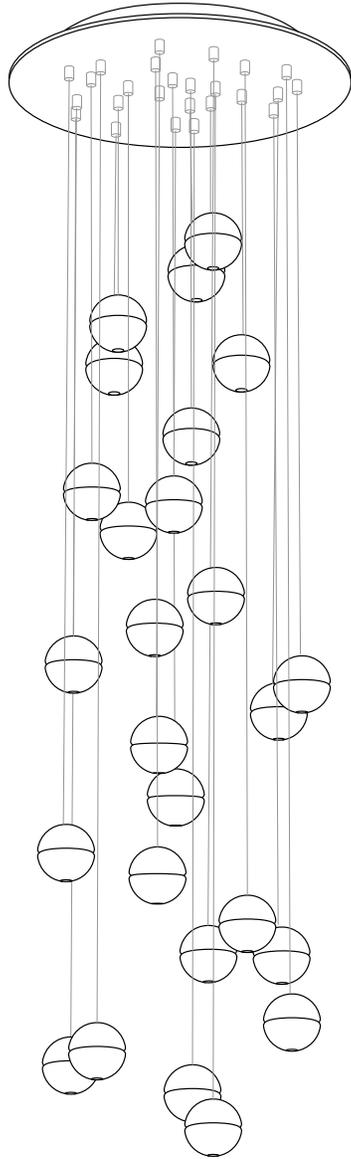

53
(2')
 up to
 3000 (10')
 standard
 up to
 30500
 (100')
 custom

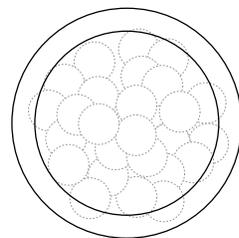

470
(18.5')
 600
(23.6')

- PENDANTS: twenty-six
- MOUNTING: white powder coated round canopy 600mm (23.6") in diameter x 53mm (2") deep
- LAMPING: 1.5w LED or 10w xenon
- COAX: fixed lengths. 3000mm (10') standard / up to 30500mm (100') maximum
- MATERIALS: cast glass, blown borosilicate glass, braided metal coaxial cable, electrical components, white powder coated canopy
- WEIGHT: approximately 61.5kg (136lb)
- TRANSFORMERS: integral

DESCRIPTION

14.26 is a random configuration of twenty six 14 pendants hung from a round canopy. The drop lengths of the pendants are randomized between a client specified range of heights to variously cluster and scatter. The result is an ambient installation or field of light.

The 14 is an articulated, seamed cast glass sphere with a frosted cylindrical void that houses a low voltage lamp. Individual pendants are visually quite subtle, but gain tremendous strength when multiplied and clustered in large groups.








BOCCI

ROUND

14.26

Design by Omer Arbel
 PRODUCT SPECIFICATION



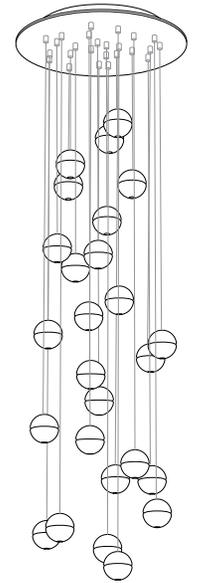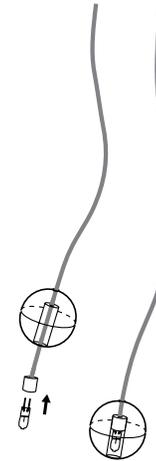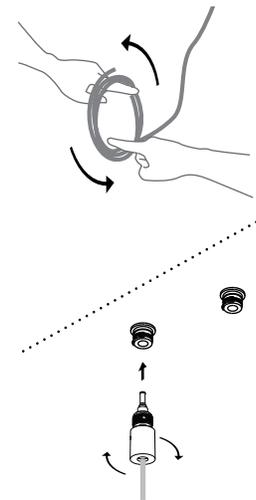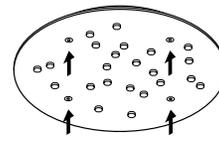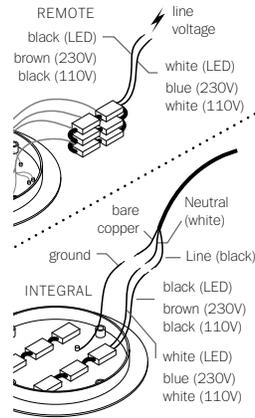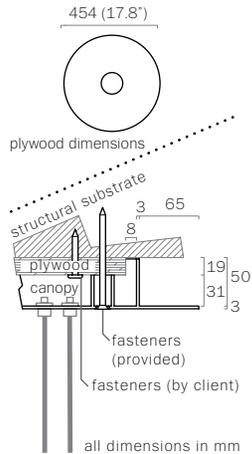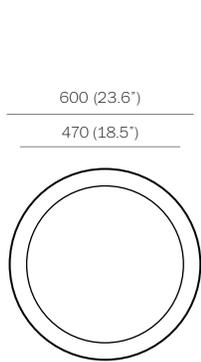

1
 Measure and mark the light fixture canopy position on the ceiling

2
 Note: The client is responsible for providing a robust 19mm (3/4") plywood backing or wood blocking to securely anchor to the structural substrate.
 Connections from the plywood to the structural substrate are the client's responsibility.
 Measure the plywood so that it fits within the canopy side walls (refer to detail above).
 Anchor the plywood backing to the structural ceiling substrate.

3
 Connect transformers inside the canopy to line voltage.
 Xenon (110V) or LED: connect the black wire to black and white wire to white wire.
 Xenon (230V): connect black wire to brown wire and white wire to blue wire.
 For the ground connection, connect the green wire with yellow stripe to the bare copper wire or green wire in the junction box.
 Note: As an option, Bocci recommends mounting transformers remotely in a close, accessible and hidden location for ease of long term maintenance. Installation to be done by certified personnel to ensure compliance with the code.

4
 Anchor canopy into the plywood backing using the fasteners provided.

5
 Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.
 Use patience: allow the cable to uncoil completely to avoid kinks.



Each pendant terminates in a "headphone jack" type connector, which plugs into a receiving receptacle in the canopy. Clients are encouraged to compose their own pendant configuration on site, thus creating a truly unique fixture. After plugging in each pendant, turn the threaded sheath into place by hand ensuring that it is adequately tightened. Tools are not required.

6
 Bocci 10w xenon or 1.5w LED lamps included. Lamping is transformer specific.
 Plug the lamp into the socket. Do not touch the lamp with your bare hands.
 Note: when using a dimmer use only low voltage electronic dimmer

7
 Clean fingerprints from glass surfaces.
 Turn fixture on.

BOCCI
 ROUND
14.26
 Design by Omer Arbel
 PRODUCT INSTALLATION INSTRUCTIONS



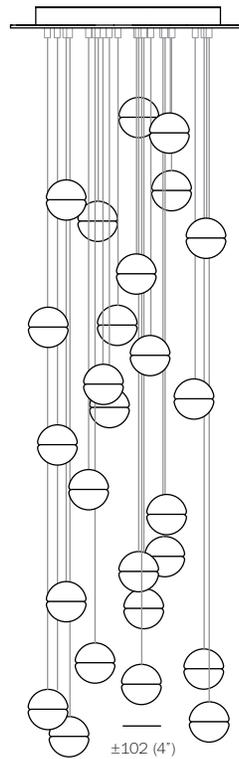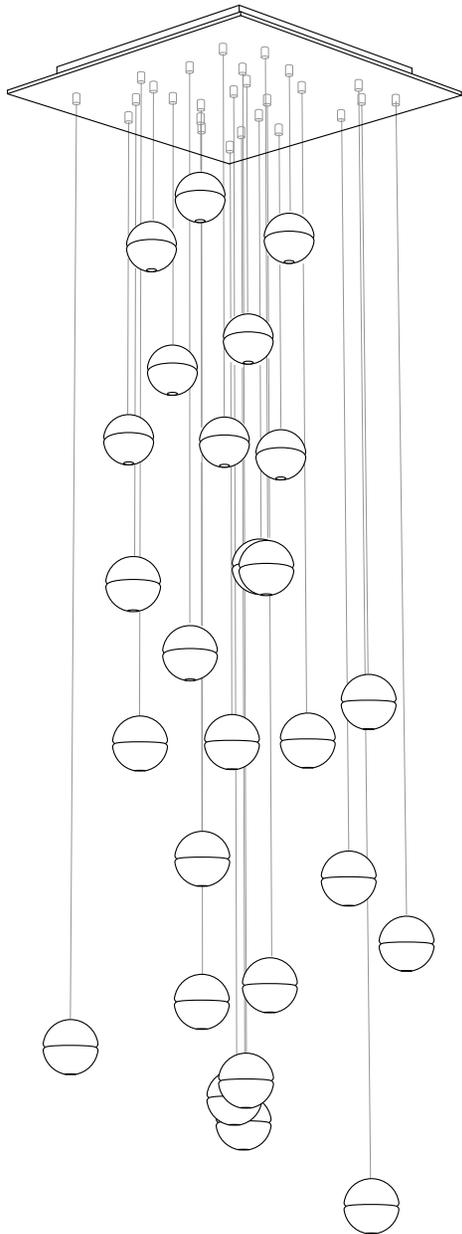

53
(2')

up to
3000 (10')
standard

up to
30500
(100')
custom

PENDANTS: twenty-six

MOUNTING: white powder coated square canopy 600mm (23.6") x 53mm (2") deep

LAMPING: 1.5w LED or 10w xenon

COAX: fixed lengths. 3000mm (10') standard / up to 30500mm (100') maximum

MATERIALS: cast glass, blown borosilicate glass, braided metal coaxial cable, electrical components, white powder coated canopy


WEIGHT: approximately 63.5kg (140lb)

TRANSFORMERS: integral

DESCRIPTION

14.26 is a random configuration of twenty six 14 pendants hung from a square canopy. The drop lengths of the pendants are randomized between a client specified range of heights to variously cluster and scatter. The result is an ambient installation or field of light.

The 14 is an articulated, seamed cast glass sphere with a frosted cylindrical void that houses a low voltage lamp. Individual pendants are visually quite subtle, but gain tremendous strength when multiplied and clustered in large groups.

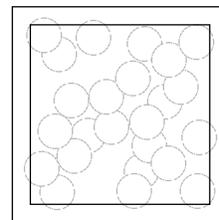

470
(18.5')

600
(23.6')








BOCCI

SQUARE

14.26

Design by Omer Arbel
 PRODUCT SPECIFICATION

CE  LISTED
 LOW VOLTAGE LUMINAIRE
 E476186

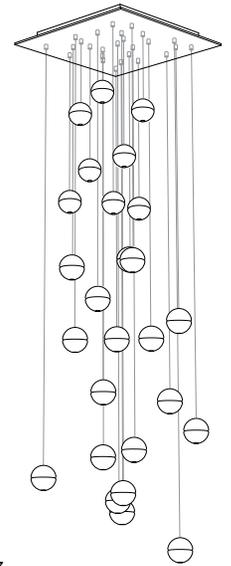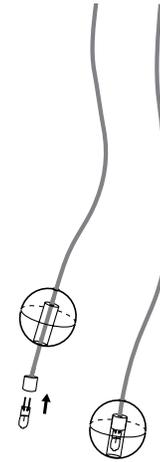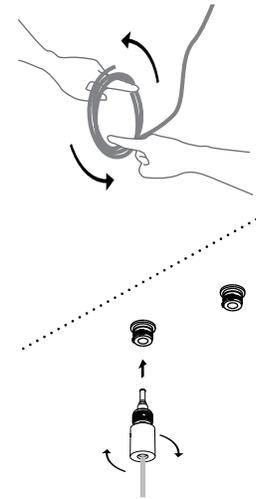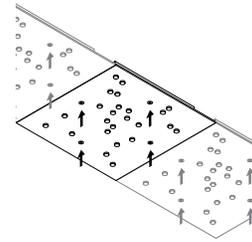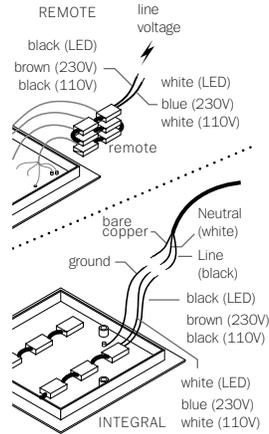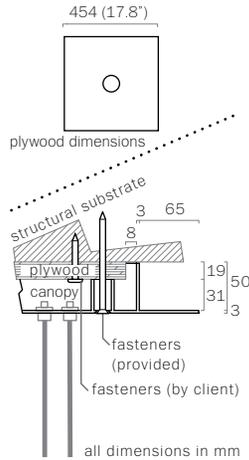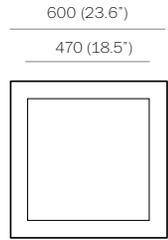

1

Measure and mark the light fixture canopy position on the ceiling

2

Note: The client is responsible for providing a robust 19mm (3/4") plywood backing or wood blocking to securely anchor to the structural substrate.

Connections from the plywood to the structural substrate are the client's responsibility.

Measure the plywood so that it fits within the canopy side walls (refer to detail above).

Anchor the plywood backing to the structural ceiling substrate.

3

Connect transformers inside the canopy to line voltage.

Xenon (110V) or LED: connect the black wire to black and white wire to white wire.

Xenon (230V): connect black wire to brown wire and white wire to blue wire.

For the ground connection, connect the green wire with yellow stripe to the bare copper wire or green wire in the junction box.

Note: As an option, Bocci recommends mounting transformers remotely in a close, accessible and hidden location for ease of long term maintenance. Installation to be done by certified personnel to ensure compliance with the code.

4

Anchor canopy into the plywood backing using the fasteners provided.

5

Very carefully uncoil the braided coaxial cable in a spool like manner. Insert your index fingers into opposite sides of the roll then rotate your fingers around each other to unroll the coaxial cable.

Use patience: allow the cable to uncoil completely to avoid kinks.

Each pendant terminates in a "headphone jack" type connector, which plugs into a receiving receptacle in the canopy. Clients are encouraged to compose their own pendant configuration on site, thus creating a truly unique fixture. After plugging in each pendant, turn the threaded sheath into place by hand ensuring that it is adequately tightened. Tools are not required.

6

Bocci 10w xenon or 1.5w LED lamps included. Lamping is transformer specific.

Plug the lamp into the socket. Do not touch the lamp with your bare hands.

Note: when using a dimmer use only low voltage electronic dimmer

7

Clean fingerprints from glass surfaces.

Turn fixture on.

BOCCI

SQUARE

14.26

Design by Omer Arbel
 PRODUCT INSTALLATION INSTRUCTIONS



LOW VOLTAGE LUMINAIRE
 E476186