
CONTENTS 20MAR2023

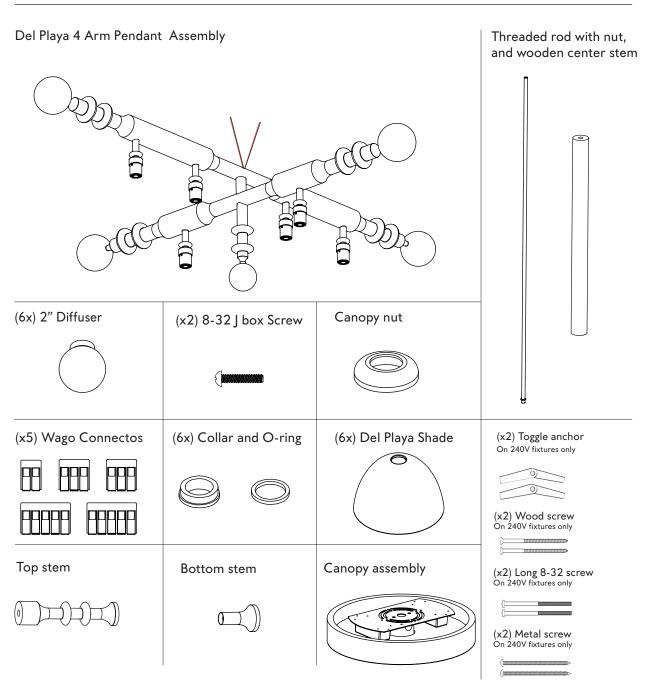

SAFETY INFORMATION

Suitable for dry, indoor use only.

Maximum ambient temperature: 25°C

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

20MAR2023


Stem and cover tube length adjustment

Note: Please contact a licensed electrician.

Example fixture only:

To measure length of stem, first determine overall length (OAL), subtract 3" for the canopy with hang-straight height and subtract the fixture height from the OAL. Fixture height is measured from bottom of the fixture to stem connection point. The resulting measurement is the final stem length.

Ex. The fixture below has an OAL of 40" and a fixture height of 21.7". 40" OAL - 4.3" canopy - 21.7" fixture height = 14" stem

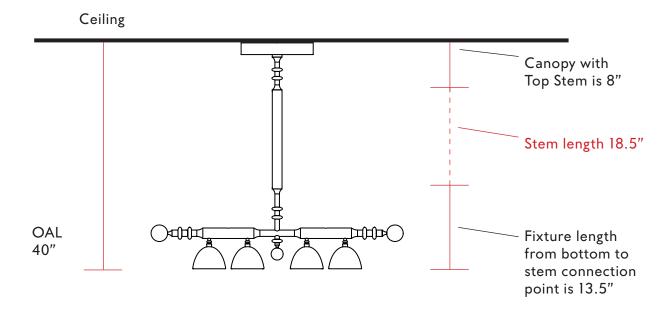

20MAR2023

Stem and cover tube length adjustment

Note: Please contact a licensed electrician.


Example fixture only:

1. To customize the length of the provided stem, cut cover tube to desired length.


Then cut the inner threaded tube so that it remains 1/2" longer than the cover tube.



2. Mark the length of the tube required, using a marker or tape. Then hold down the tube with a hand or a clamp, use a hacksaw or electrical tool to cut the tube. Recommended to clean tube after cutting to remove any metal chippings.

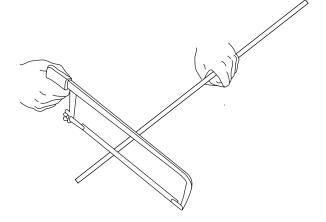


3. Now that the cover tube is cut to 18.5", measure the all thread tube to be 18.5 and 1/2" long. And place a mark, with a marker or tape.

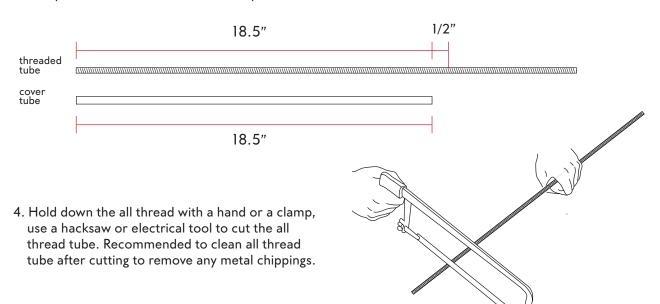


20MAR2023

- 1. Screw in the threaded rod with a nut at one end (A) into the center hole on the fixture (B). Make sure to tighten in as much as possible.
- 2. Slide the bottom stem (C), then the center stem (D), and the top stem (E), onto the threaded rod (A).

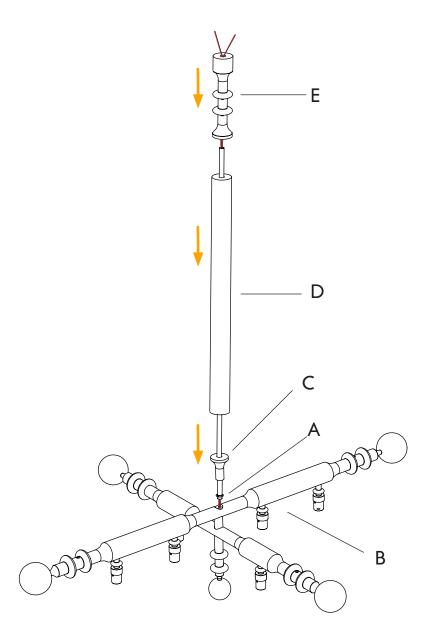


20MAR2023

- 3. (As seen in figure 1) From the canopy assembly, unscrew the canopy nut (F), to release the canopy (G), and crossbar (H).
- 4. Slide the canopy nut (F), and canopy (G), onto the stem (I).
- 5. Feed the wires from the threaded rod (A), through the nipple in crossbar (H). DO NOT make any wire connections yet.
- 6. Then screw on the crossbar onto the threaded rod (A). Be sure not to crimp any wires.

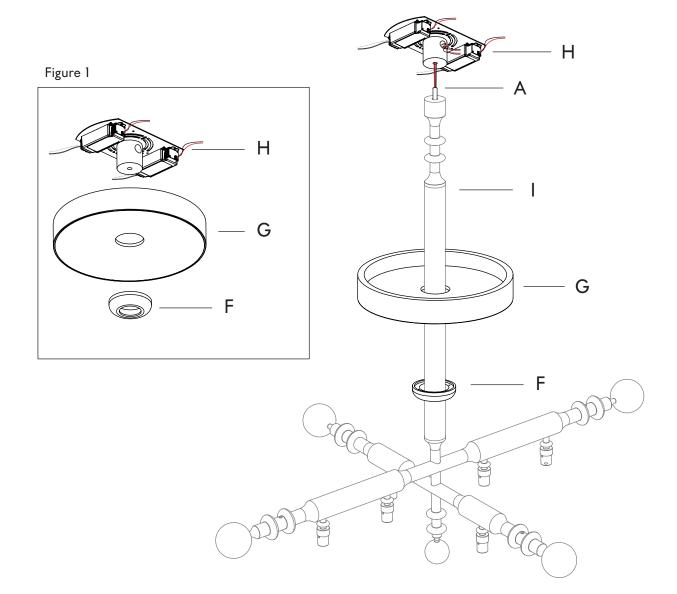

20MAR2023


- 7. Raise the fixture up to the ceiling, and fit the crossbar (H) over the J-box (J), feed the lead wires from the J-box through the crossbar.
- 8. Then secure the crossbar to J-box with two provided screws (L).
- 9. Next, connect the low voltage wires from the fixture to the LED drivers using two 5-port wagos (M), and connect the lead wires from the LED driver to the J-box lead wires using two 3-port wagos (N).
- 10. Connect the ground wires using 2-port wago. (Optional dimming wire connections (P)).

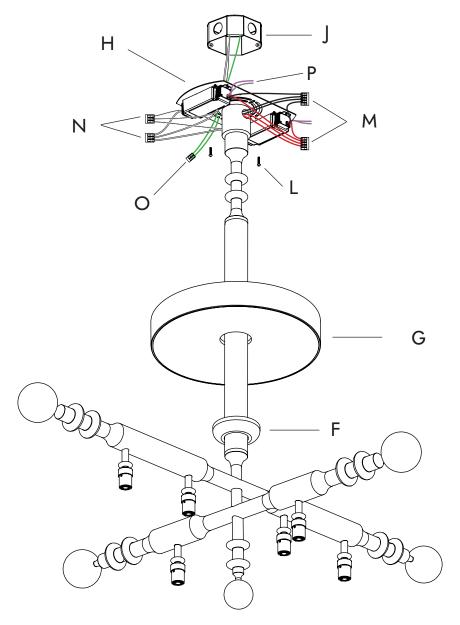

20MAR2023

Note: Please contact a licensed electrician.


11. After all the connections have been made, raise the canopy (G) over the crossbar, and tuck all the wires inside. Then secure the canopy with a canopy nut (F).

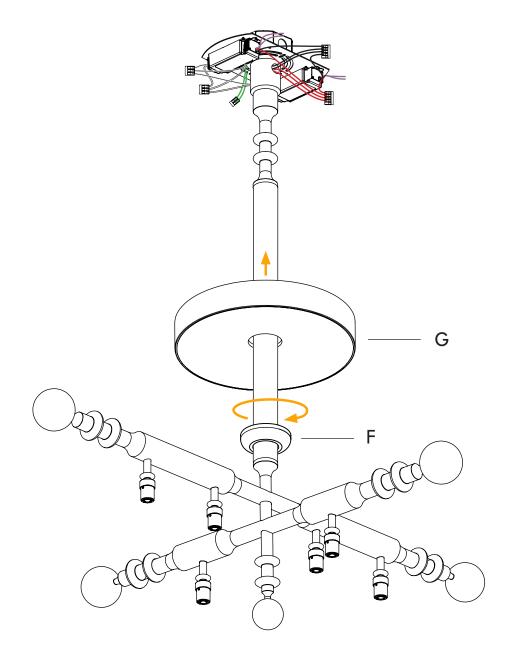


20MAR2023

SHADE INSTALLATION

1. Fit the shade (A) onto the LED cup (B), and secure it with collar (C) and O-ring (D). Then screw on the LED diffuser (E).

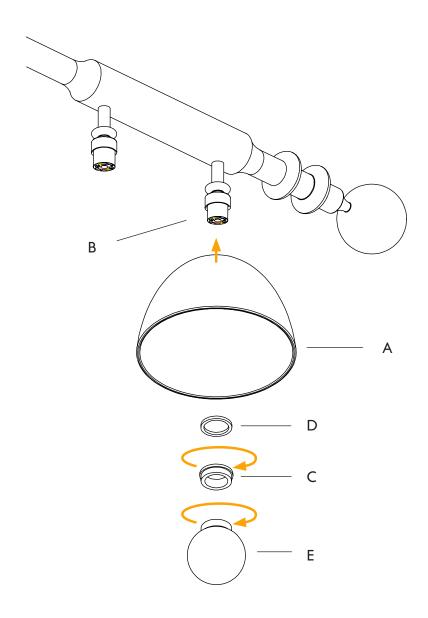

CONTENTS 20MAR2023

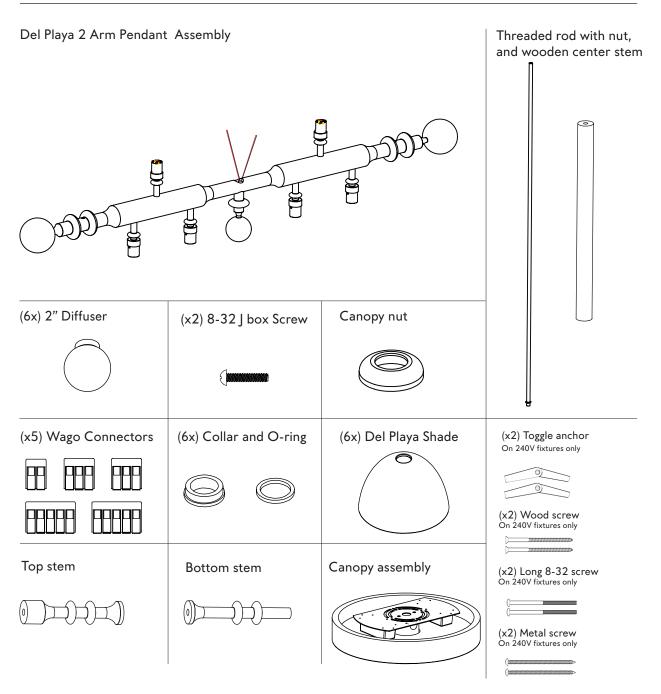

SAFETY INFORMATION

Suitable for dry, indoor use only.

Maximum ambient temperature: 25°C

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

20MAR2023


Stem and cover tube length adjustment

Note: Please contact a licensed electrician.

Example fixture only:

To measure length of stem, first determine overall length (OAL), subtract 3" for the canopy with hang-straight height and subtract the fixture height from the OAL. Fixture height is measured from bottom of the fixture to stem connection point. The resulting measurement is the final stem length.

Ex. The fixture below has an OAL of 40" and a fixture height of 21.7". 40" OAL - 4.3" canopy - 21.7" fixture height = 14" stem

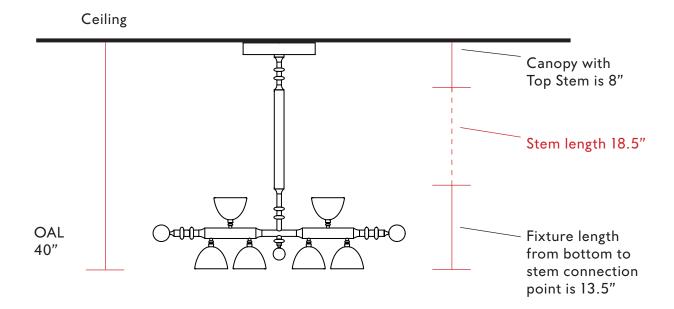

20MAR2023


Stem and cover tube length adjustment

Note: Please contact a licensed electrician.


Example fixture only:

1. To customize the length of the provided stem, cut cover tube to desired length.


Then cut the inner threaded tube so that it remains 1/2" longer than the cover tube.



2. Mark the length of the tube required, using a marker or tape. Then hold down the tube with a hand or a clamp, use a hacksaw or electrical tool to cut the tube. Recommended to clean tube after cutting to remove any metal chippings.

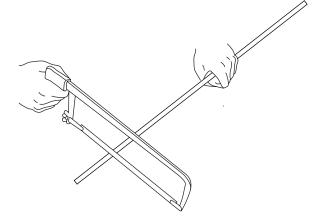


3. Now that the cover tube is cut to 18.5", measure the all thread tube to be 18.5 and 1/2" long. And place a mark, with a marker or tape.

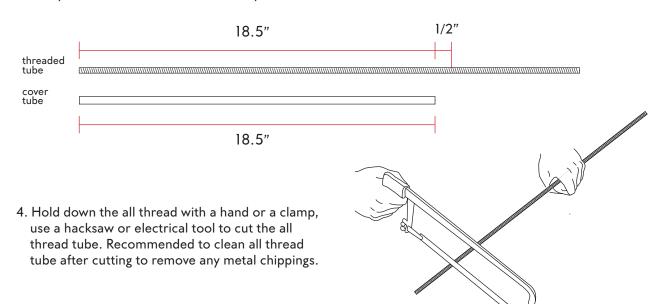


20MAR2023

- 1. Screw in the threaded rod with a nut at one end (A) into the center hole on the fixture (B). Make sure to tighten in as much as possible.
- 2. Slide the bottom stem (C), then the center stem (D), and the top stem (E), onto the threaded rod (A).

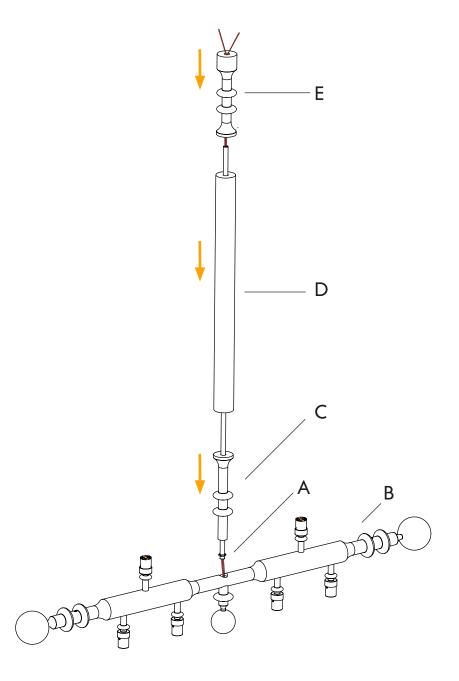


20MAR2023

- 3. (As seen in figure 1) From the canopy assembly, unscrew the canopy nut (F), to release the canopy (G), and crossbar (H).
- 4. Slide the canopy nut (F), and canopy (G), onto the stem (I).
- 5. Feed the wires from the threaded rod (A), through the nipple in crossbar (H). DO NOT make any wire connections yet.
- 6. Then screw on the crossbar onto the threaded rod (A). Be sure not to crimp any wires.

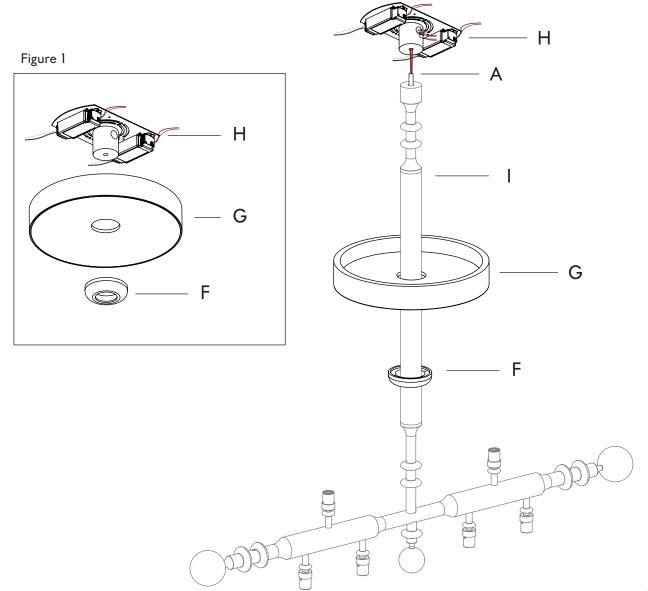

20MAR2023


- 7. Raise the fixture up to the ceiling, and fit the crossbar (H) over the J-box (J), feed the lead wires from the J-box through the crossbar.
- 8. Then secure the crossbar to J-box with two provided screws (L).
- 9. Next, connect the low voltage wires from the fixture to the LED drivers using two 5-port wagos (M), and connect the lead wires from the LED driver to the J-box lead wires using two 3-port wagos (N).
- 10. Connect the ground wires using 2-port wago. (Optional dimming wire connections (P)).

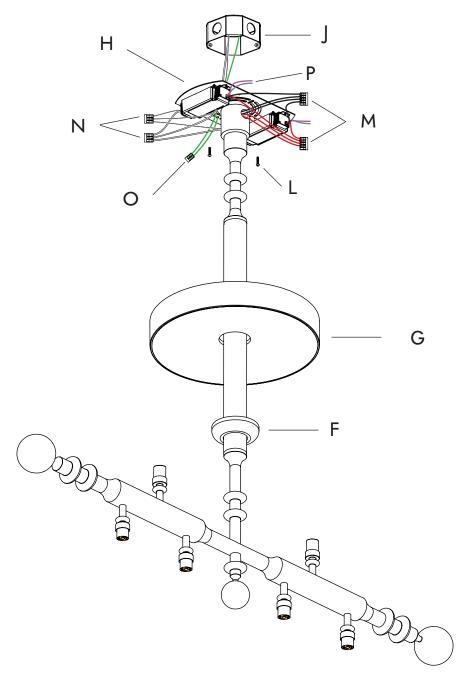

20MAR2023

Note: Please contact a licensed electrician.


11. After all the connections have been made, raise the canopy (G) over the crossbar, and tuck all the wires inside. Then secure the canopy with a canopy nut (F).

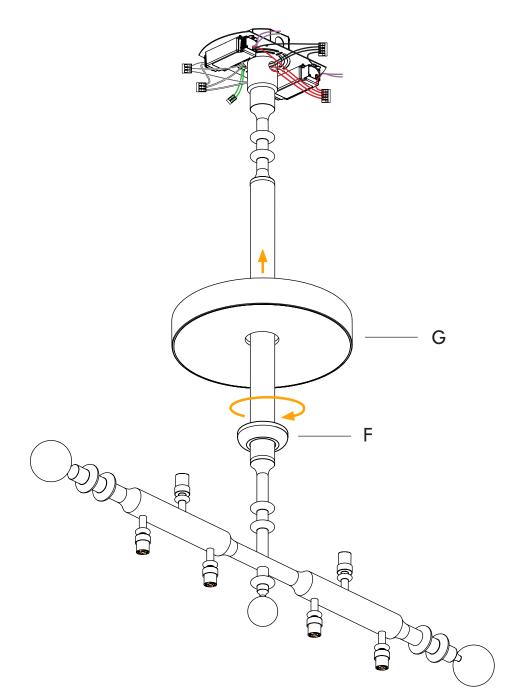


20MAR2023

SHADE INSTALLATION

1. Fit the shade (A) onto the LED cup (B), and secure it with collar (C) and O-ring (D). Then screw on the LED diffuser (E).

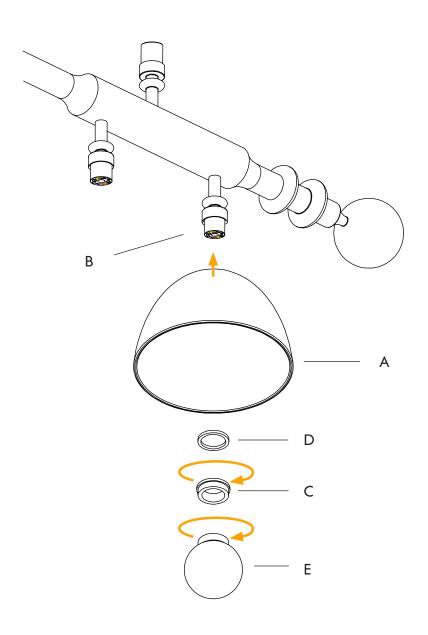

CONTENTS 09MAR2023

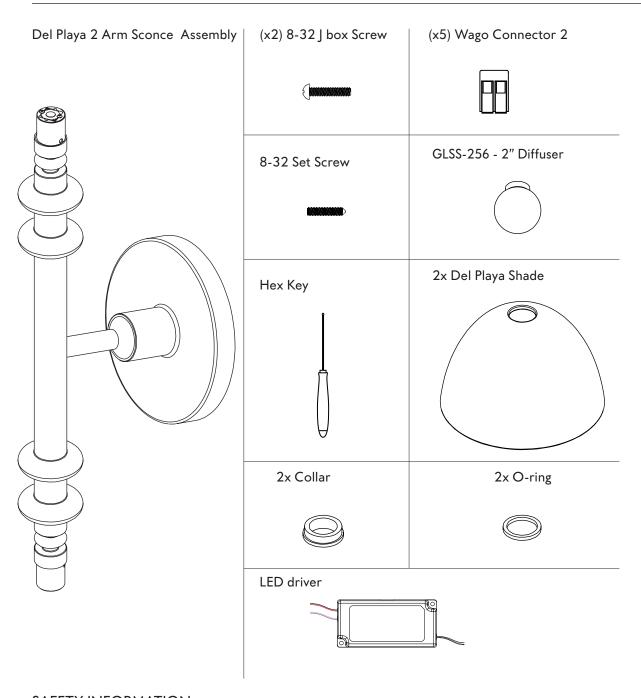

SAFETY INFORMATION

Suitable for dry, indoor use only.

Maximum ambient temperature: 25°C

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.


Roll & Hill

DEL PLAYA 2 ARM SCONCE | INSTALLATION


09MAR2023

Note: Please contact a licensed electrician.

 Install the driver (A) into the junction box (B) and connect the live wire connections (C) to the driver using the wago connectors.

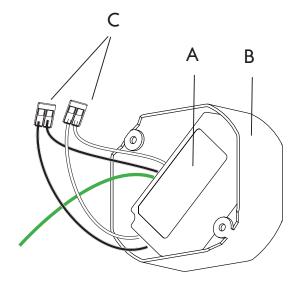


- Ground the crossbar (D) to the junction box using the wago connector. Mount the crossbar to the junction box using the provided #8-32 screws (E).
- 3. Pull the output driver wires (F).

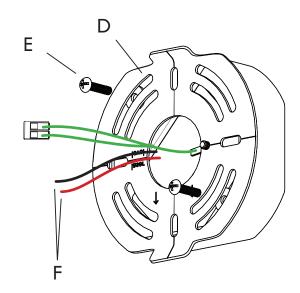

DEL PLAYA 2 ARM SCONCE | INSTALLATION

09MAR2023


4. Carefully hold fixture (G) to crossbar (D) and make secondary wire (H) connections. Push wire connectors back through center hole of crossbar into junction box (B).

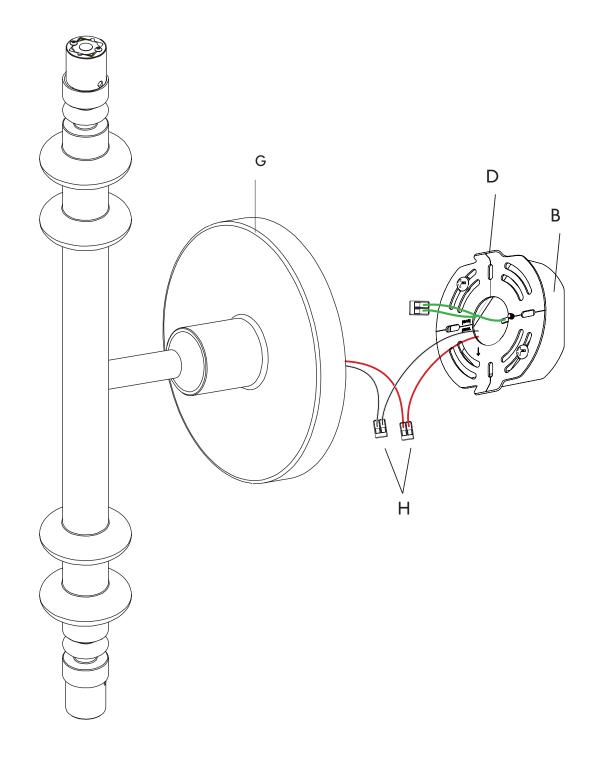


DEL PLAYA 2 ARM SCONCE | INSTALLATION

09MAR2023

5. Tuck all the wire connections inside the junction box and hook the fixture backplate (I) onto the french cleat of the crossbar (J). Once the fixture assembly is resting in place, use the provided Hex Key (K) to tight the bottom set screw to the crossbar until the backplate is secured.

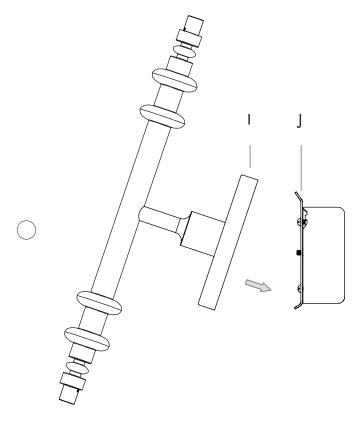


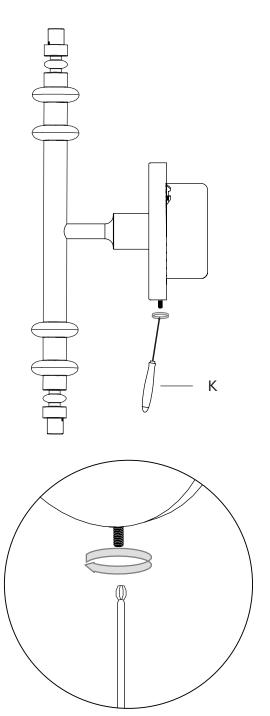


DEL PLAYA 2 ARM SCONCE | INSTALLATION

09MAR2023

6. Fit the shade (L) onto the LED cup (M), and secure it with collar (N) and O-ring (O). Then screw on the LED diffuser (P).

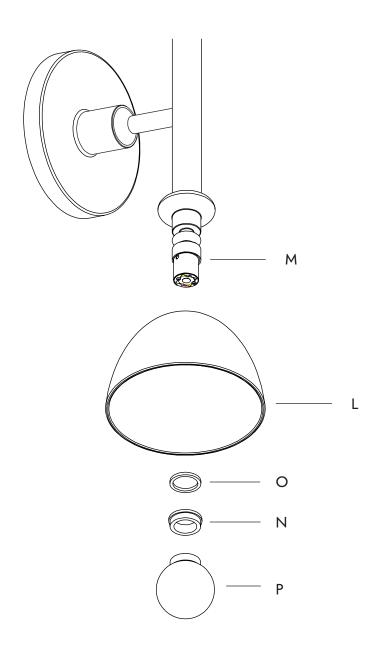

CONTENTS 09MAR2023

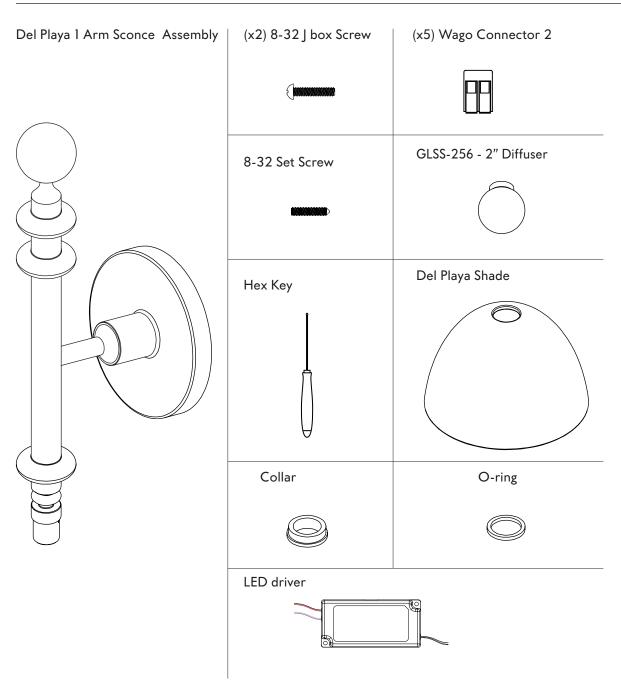

SAFETY INFORMATION

Suitable for dry, indoor use only.

Maximum ambient temperature: 25°C

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.


Roll & Hill

DEL PLAYA 1 ARM SCONCE | INSTALLATION


09MAR2023

Note: Please contact a licensed electrician.

 Install the driver (A) into the junction box (B) and connect the live wire connections (C) to the driver using the wago connectors.

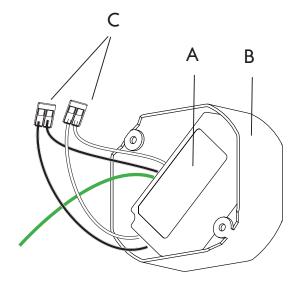


- Ground the crossbar (D) to the junction box using the wago connector. Mount the crossbar to the junction box using the provided #8-32 screws (E).
- 3. Pull the output driver wires (F).

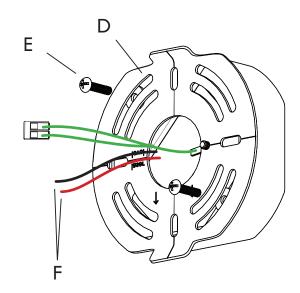

DEL PLAYA I ARM SCONCE | INSTALLATION

09MAR2023


4. Carefully hold fixture (G) to crossbar (D) and make secondary wire (H) connections. Push wire connectors back through center hole of crossbar into junction box (B).

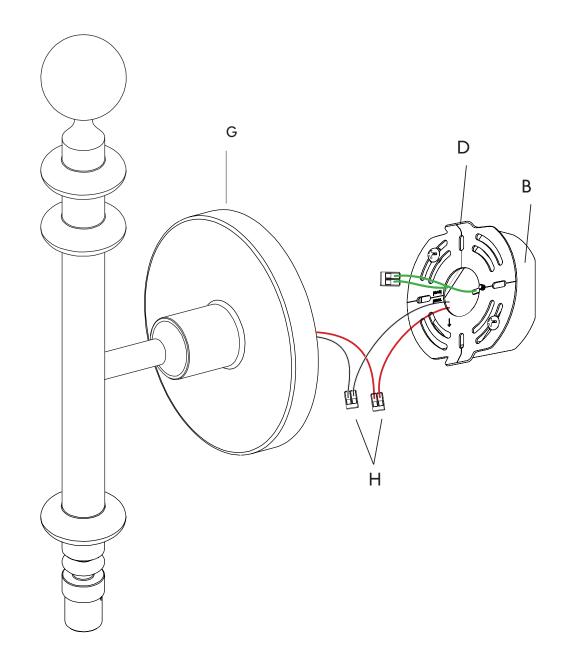



DEL PLAYA I ARM SCONCE | INSTALLATION

09MAR2023

5. Tuck all the wire connections inside the junction box and hook the fixture backplate (I) onto the french cleat of the crossbar (J). Once the fixture assembly is resting in place, use the provided Hex Key (K) to tight the bottom set screw to the crossbar until the backplate is secured.

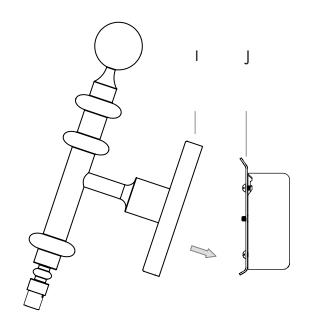

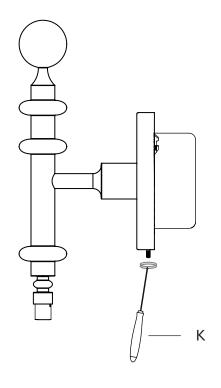

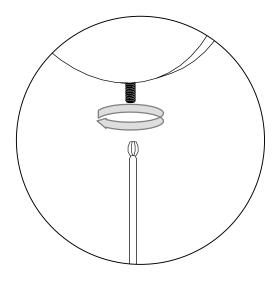

DEL PLAYA 1 ARM SCONCE | INSTALLATION

09MAR2023

6. Fit the shade (L) onto the LED cup (M), and secure it with collar (N) and O-ring (O). Then scre on the LED diffuser (P).

